
Contents

Updates	1
Maintenance items	1
July 2013 fix	1
June 2013 fix	1
Checking the firmware version.....	1
Firmware update procedures	2

Updates

Always use the most recent firmware for this device. Please visit the TEAC web site (<http://audio.teac.com/support/downloads/>) to check for the latest firmware.

Maintenance items

July 2013 fix

Fix in driver firmware dvA2W

- Operation stability during playback of MP3 and WMA files has been improved.

June 2013 fix

Fix in driver firmware dvA2U

- Operation stability during playback of audio CDs has been improved.
-

Checking the firmware version

Before updating your PD-H01, check its firmware version.

1 Press the STANDBY/ON button to put the unit into standby.

2 While pressing **◀◀** button, turn the unit on.

3 All indications on the display light. Press the main unit **◀◀** button.

4 The display becomes dark. Press the main unit **◀◀** button.

5 The main firmware version is shown. Press the main unit **◀◀** button.

6 The driver firmware version is shown. Press the main unit **◀◀** button.

7 “>>I” is shown. Press the main unit **▶▶I** button.

8 “▶” is shown. Press the main unit **▶/II** button.

9 “■” is shown. Press the main unit **■/▲** button.

- The display becomes dark.

10 Press the main unit STANDBY/ON button twice or another button on the main unit once.

Continued on the next page ➔

Firmware update procedures

Prepare a blank CD-R/RW and a computer system that can create a data disc.

Warning

Take sufficient care to prevent the unit from losing power during the firmware update. If the unit should lose power during a firmware update, restarting it might not be possible or it could otherwise malfunction.

1 Download the file

Download the latest version of the firmware from the TEAC website (<http://audio.teac.com/support/downloads/>). If the downloaded file is compressed in the zip format, for example, uncompress it.

- Do not change the file name.

2 Create the updater data disc

Place the downloaded update firmware (dvdrom.bin) directly in the root directory.

```
¥ Root directory
└─ dvdrom.bin
```

- Do not use Japanese, Chinese or other multi-byte characters when creating the folder.

Windows

When writing to a CD-R/RW disc, use writing software to conduct "Disc at once" writing.

Mac

Create the disc using the standard "Burn '[file name]' to disc..." function in the Mac OS X Finder. Use a CD-R/RW disc. If you use different writing software, use the DAO format.

3 Update the firmware

- 1) Turn the unit on.
- 2) After "TEAC PD-H01" appears, when "NoDSC" appears, load the update data disc.
After "Load." appears, the firmware update starts.
- 3) When the the firmware update completes, the disc will be ejected. Restart the unit once before use.